

Grande Series - Polymer Exit Sign

AC, AC/DC or Self-Powered

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be taken including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use outdoors.
2. Do not let power supply cords touch hot surfaces.
3. Do not mount near gas or electric heaters.
4. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
5. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
6. Do not use this equipment for other than intended use.
7. All servicing should be performed by qualified service personnel.

SAVE THESE INSTRUCTIONS

Installation Instructions

1. Turn off AC power.
2. Route AC unswitched circuit of rated voltage into electrical box and leave 6" of wire length.
3. Remove the exit door using a coin or a screwdriver at the top or bottom of the door.
4. Determine the mounting position (end, wall or ceiling). Note: canopy is required for end or ceiling mount.
5. Our system can accept input voltages of 120 VAC, 277 VAC or 347 VAC. Therefore, connect the black (120 VAC), orange (277 VAC) or red (347 VAC) and white (common) leads to the building utility.

Wall mounting

- a. No canopy required. Knock out the proper hole pattern in the back cover to mount to standard junction box (See Fig. 2). Feed the AC supply leads through the center hole and make the proper connections. Feed the excess wire into the junction box and secure the back cover to the junction box using the junction box screws. Proceed to step 6.

End or ceiling mount

- a. Canopy required. Attach the spider plate to electrical box with the junction box screws. Remove appropriate hole plug. Snap the canopy in to the opening on top or side of frame (See Fig. 3) and feed AC supply leads through side or top opening and then through canopy. Snap canopy on to frame. Screw canopy to frame(11) (recommended for a more secure installation) (See fig. 1 and 3).

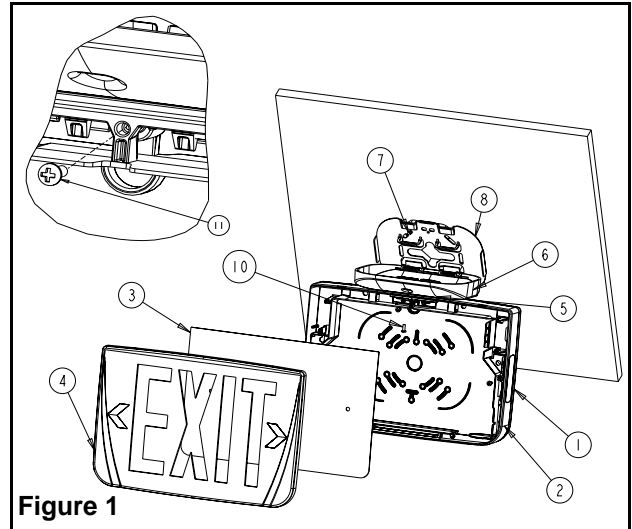


Figure 1

Part List

- | | |
|-------------------------|---------------------------------------|
| 1. Back plate | 7. Junction box screws (not provided) |
| 2. Frame | 8. Spider plate |
| 3. Diffuser panel | 9. Junction box |
| 4. Exit door | 10. Canopy plate screw |
| 5. Hole plug for Canopy | 11. Canopy housing screw |

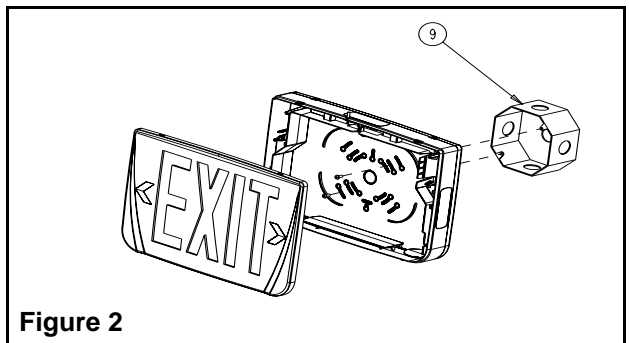


Figure 2

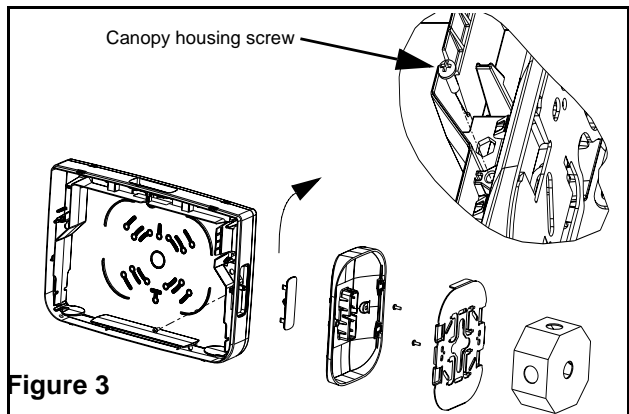


Figure 3

Make the proper wire connections. The “Quick-install” canopy is equipped with ribs allowing you to hang the unit to the spider plate to facilitate wiring (See fig.4). Feed the excess wire into the junction box and secure the canopy to the junction box using the canopy screw provided(10).

6. Remove the appropriate chevron(s) on the exit door by holding sign with both hands. Push chevrons from the inside with thumb (See Fig. 5). You may need to unsnap the diffuser panel to do so.
7. Reinstall exit door(s).
8. Energize AC. Sign will illuminate.

AC/DC Models

Refer to Fig. 6 for AC & DC wiring.

For DC portion — Wire the Red lead (+) to the positive DC input voltage and the Blue Lead (-) to the negative DC input voltage. Note: DC input voltage range is 6 volts to 48 volts.

Self-Powered Models

Manual testing

Press test switch. Legend will flicker, but remain lit. On release, external green LED will illuminate, and automatic charger will restore battery to full charge.

Automatic testing and diagnostics, optional

The models with the automatic testing and diagnostic option include a micro-controller which self-tests the unit on a monthly basis and identifies as well displays failures of the electrical components: battery, battery charger, lamps, LEDs.

Self-test

The self-test is performed every 30 days for 30 seconds, every 60 days for 30 minutes, and annually for 90 minutes.

Diagnostic function

The diagnostic function uses an external green LED indicator. Service is required if the green LED blinks indicating that an alarm condition is detected (See Fig. 7).

o Green	Steady	AC On
-o Green	Blinking	In Test
o Red	Steady on	Battery Disconnect
-o Red	One Blink	Battery Failure
o-o Red	Two Blinks	Charger Failure
o-o-o-o Red	Four Blinks	LED Strip Failure

Maintenance

None required. If AC supply to the unit is to be disconnected for 2 months or more, the battery must be disconnected, Self-Powered Models only.

Note — Nickel Cadmium battery units are shipped discharged and may require 10 minutes of connection to AC supply before start-up test procedure, and 96 hours to reach full charge or 24 hours to charge to meet a 30 minute discharge.

Other options

For all other options please refer to the “Addendum for special options” sheet. Does not apply to all models.

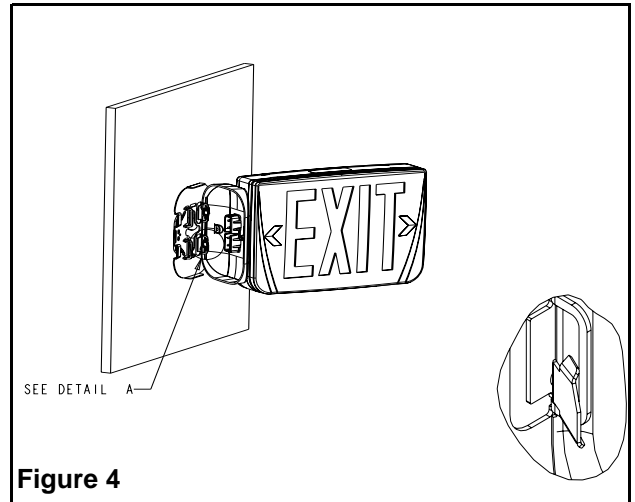


Figure 4

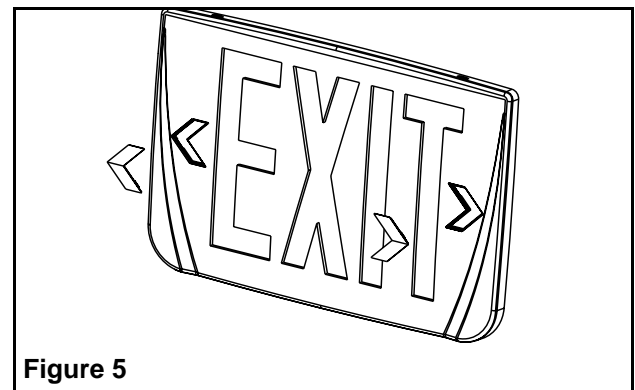


Figure 5

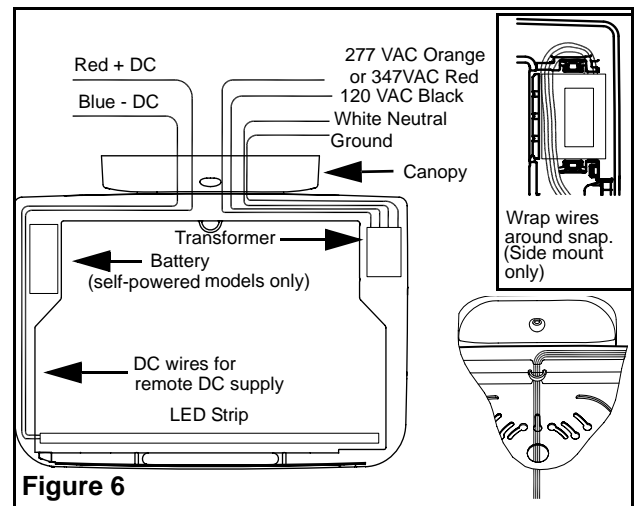


Figure 6

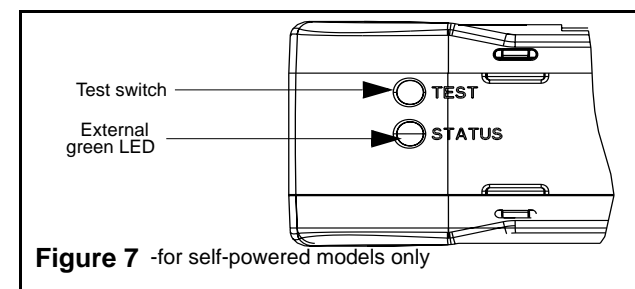


Figure 7 -for self-powered models only